


Typical screen configuration:

On the following pages are displayed screenshots with suggested configurations for Mach software using the Sound Logic Encoder interface. Each tab of the of “Config”/”ports and pins” screen will be covered

Note that Port#2 is enabled. Address has been entered and “Pins 2-9 as inputs” has also been enabled. Kernel speed is based on each users particular demands.

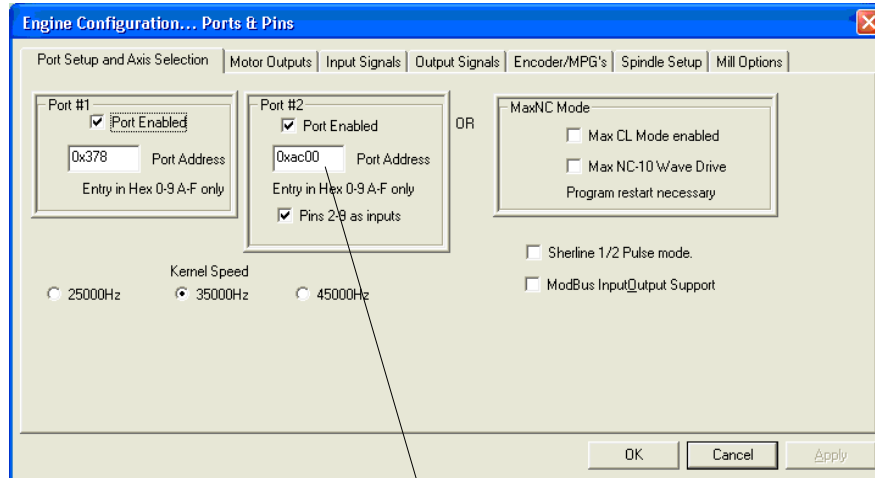

Motor Outputs:

2nd port address entered here.

The following screen is a configuration for use with the Sound Logic Breakout Board. If another breakout/distribution device is used your configuration may differ. Note that “active low” may be opposite also depending your particular configuration. All axis’s used must be enabled.

